

Zone TEST

TEST Indication

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

Menu for viewing the zones in test

Messages for the zones in test

Button sequence for ZONE testing:

1

Code for ACCESS LEVELS 2 and 3

2

3

4 5

Go to the zones in test and activate the installed detectors to check the system for proper work and efficiency.

Button sequence to exit the ZONE testing:

5

For technical support help:

Tel.:; Mobile:

DISABLE Introducing

Indication for introduced DISABLE

- GENERAL FIRE
- PRE ALARM
- GENERAL FAULT
- SYSTEM FAULT
- SYSTEM SILENCE
- DELAY
- DISABLE
- TEST
- POWER ON

Menu for viewing the introduced disables

Messages for disabled zones, outputs and devices.

Button sequence for DISABLE introducing:

1

Code for ACCESS LEVELS 2 and 3

Button sequence for ZONE DISABLE:

2

Select the zone for disabling

3

The zone is disabled

Button sequence for OUTPUTS DISABLE:

2

Choose an output to disable: Sounder; Fire Brigade; Fire Protection; Fault Routing.

3

The output is disabled

You can disable several outputs at the same time

Button sequence for LOOP DEVICES DISABLE:

2

Select the device type from the list

3

The loop device is disabled

Enabling of ZONES, OUTPUTS and LOOP DEVICES:

1

The Zone / Output / Loop Device is enabled