Description

SOUND100_AP is a loop powered type A for indoor use sounder in conformity with standard EN54-3

Each sounder is provided with integrated EN54-17 isolator circuit, that automatically takes action in case of need. Addresses can be programmed by means of the programmer or with the addressing function of Teledata fire alarm panels.

Technical Specifications

Supply voltage	18 ~ 27V		
Stand by consumption	130 μΑ		
Alarm consumption	20mA		
Siren voltage ON	24Vdc		
Absorbed power	0,2W		
Souder Output	107 dB		
Operating temperature range	-10°C ~ +55°C		
Humidity	85% RH (no condensation)		
Dimensions	D: 100mm H: 92mm		
Maximum cable section	2.5 mm		
IP rate	IP 65		



Setting the Address

Modules can be addressed by using a special hand-held programming unit **(ONEPROGRAMMER_AP)**.

Addresses may be selected over the range from 1 to 240, although, of course, each device on the loop must have a unique address.

- Connect the programmer to the module using the proper cable (refer to the ONEPROGRAMMER_AP instruction manual).
- After installing all modules and other loop devices, apply power to the loop in accordance with the panel's installation instructions.

Device's Mounting

According to local electrical regulations, mount securely to a single gang box using the provided screws.

Siren Module Configuration Fig.1

To connect the sounder is necessary connect it on the loop respecting loop polarity. Sounder has insulator on board; It work between two negative (1&3 pin)

Те	rminal	Description		
1	Loop line IN (-)	Loop Negative input		
2	Loop line OUT (-)	Loop Negative output		
3	Loop line IN (+)	Loop Positive input		
4	Loop line OUT (+)	Loop Positive output		

Maintenance

Test the siren periodically according to local codes of practice. Those devices contain no serviceable part, so, should a fault develop, return them to your system supplier for exchange or disposal, according to warranty conditions.

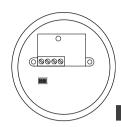


Fig. 1

Name Jun	nper	Frequency	Sound Output dBA	
Tone 1	88	2400-2800Hz swept every 143ms (7Hz)	97	
Tone 2		600Hz for 500ms, then 1300Hz for 500ms	98	
Tone 3		800Hz for 500ms, then 1000Hz for 500ms	94	
Tone 4	188	2800Hz continuous	92	

Caution

Disconnect loop power before installing the Sounders

WARNING

Teledata

Electrostatic Sensitive Device. Observe precautions when handling and making connections.

20063 Cernusco sul Naviglio (MI) - Via Brescia 24 G - Italy

Tel.: +39 02 27 201 352 - +39 02 25 92 795 | mail: info@teledata-i.com



www.TeledataOne.com

Teledata

20063 Cernusco sul Naviglio (MI) - Via Brescia 24 G - Italy Tel.: +39 02 27 201 352 - +39 02 25 92 795 | mail: info@teledata-i.com

#Teledata one

SOUND100_AP
Addressed Sounder En54-3
With Short Circuit Isolator



SOUND100_AP
Addressed Sounder En54-3
With Short Circuit Isolator

Installing To Ensure Ip 65 Protection

To ensure IP 65 protection, back box must be drilled in pictures and hole must be protected with cable clamps as shown in fig.2 and fig.3

Diameter of holes must to be 13 mm.

Cable clamps must to be PG7 type.

Cable must to be in according to EN 50200

standards



Warnings And Limitations

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions. Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

Warranty

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request

TELEDATA S.R.L.

www.TeledataOne.com

TELEDATA S.R.L. Via Brescia 24 G 20063 Cernusco S.N. Milano

> EN 54-3 EN 54-17

SOUND100_AP

0370-CPR-3643



20063 Cernusco sul Naviglio (MI) - Via Brescia 24 G - Italy Tel.: +39 02 27 201 352 - +39 02 25 92 795 | mail: info@teledata-i.com